Quick guide for using the TrekStor **USB-MusicStick** 130

Note: Detailed instructions for using the TrekStor USB-MusicStick 130 can be found on the Internet support page under http://www.trekstor.de.

• Controls for the TrekStor **USB-MusicStick** 130

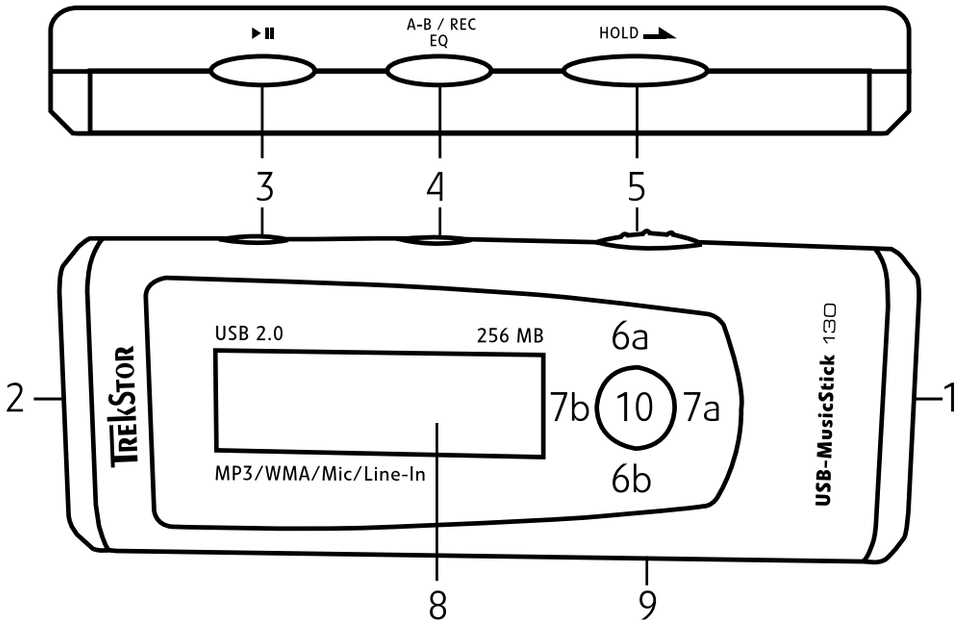

1 Openable USB connection
2 Headphone jack, line-in jack
3 On/off/play/pause/stop ⏯
4 **A-B / REC / EQ**
5 Button lock **HOLD**
6a Volume +
6b Volume -
7a Fast forward ⏭
7b Rewind ⏮
8 LC-Display
9 "MIC" Microphone
10 "Jog-Key" (menu)

• Connecting the TrekStor **USB-MusicStick** 130 to a PC

Note for users of Windows 98: First download the driver from our homepage at http://www.trekstor.de. Then install the driver before connecting the **USB-MusicStick** 130 *to your PC.*

Connect the **USB-MusicStick** 130 to a USB port in your PC. Your operating system will immediately recognize the **USB-MusicStick** 130 and will add a "Removable Disk" under "My Computer".

• Exchanging data with the TrekStor **USB-MusicStick** 130

1) Select the desired files with your mouse. Copy these files by clicking them with your right mouse key and then selecting "Copy".

2) Under "My Computer", select the removable storage device "TrekStor USB-MusicStick 130".

3) Click it with your right mouse key, and select "Paste" to start copying. After copying is over, the data will be available on the **USB-MusicStick** 130.

• Logging off and unplugging the TrekStor **USB-MusicStick 130** from the PC

Windows 98 (SE): Look for the **USB-MusicStick 130** under "Device Manager" (under "Drives"), and click the device with the left mouse key. Select the menu item "Remove". You can now disconnect the **USB-MusicStick 130** from the PC.

Windows 2000/ME/XP: At the bottom right on the task bar, click your right mouse key on the symbol "Unplug or Eject hardware". In the context menu that appears, click the left mouse key on "Stop USB Mass Storage Device - Drive" to select it.

Note: Please follow the recommended logoff procedure to prevent damage to the device or data loss.

• Operation TrekStor **USB-MusicStick 130**

• Turning the device on and off

Turn on the **USB-MusicStick 130** by briefly pressing the ⏯ button. To turn off the **USB-MusicStick 130**, press the ⏯ button for two seconds.

Note: Make sure that the HOLD switch has been moved to the left, i.e., that the button lock is turned off. If the button lock is activated, the button lock symbol or a corresponding message will appear.

• Different modes

The **USB-MusicStick 130** has different modes (playback, record, settings, delete and system info). To go to a mode, briefly press the "Jog Key". Push the "Jog Key" to the right ⏭ or left ⏮ to select the desired mode, and confirm by pressing the "Jog Key" again.

Mode: Playback
Switch to "PlayMusic" mode.

• Playback
Briefly press the ⏯ button to start the playback of an audio file.

• Pause
Briefly press the ⏯ button to stop playback. Repress the ⏯ button to continue playback.

• Stop
Hold the ⏯ button for approximately 1 second to stop playback. Repress the ⏯ button to start playback at the beginning of the title.

• Change title
Briefly press the "Jog Key" to the right ⏭ or left ⏮ to change the current title. Press the "Jog Key" to the right ⏭ to select the next title. If you press the "Jog Key" to the left ⏮ within 5 seconds after a playback starts, you switch to the prior title. If you do this after 5 seconds of playback, the **USB-MusicStick** 130 returns to the beginning of the current title.

• Fast Forward/Rewind within a title
By continuously pressing the "Jog Key" in one direction, you can go forward or rewind within a title. Press the "Jog Key" to the right ⏭ to fast-forward. Press the "Jog Key" to the left ⏮ to rewind.

Note: The longer you hold the "Jog Key" in one direction, the faster the device will go forward or rewind.

• Volume Increase/Volume Decrease
You can easily decrease the volume by briefly pressing the "Jog Key" up ⊕ , or increase it by pressing the "Jog Key" down ⊖.

Mode: Record
Switch to "Voice" mode.

Note: Set the recording source (microphone or line-in) in the mode "Setting" ➔ "Recordset" ➔ "Source".

• Record voice

You can record your voice using the integrated microphone.
Briefly press the A-B / REC / EQ button on the **USB-MusicStick 130** to start voice recording.
To stop recording, again briefly press the A-B / REC / EQ button.

Note: All voice recordings are saved in the 'VOICE' folder.

• Line-in recording

Connect the desired external source (such as a CD player) to the headphone jack. Briefly press the A-B / REC / EQ button on the **USB-MusicStick 130** while simultaneously starting the external source. To stop recording, again briefly press the A-B / REC / EQ button.

Note: All line-in recordings are saved in the 'LINE-IN' folder.

Mode: Settings

Switch to the "Setting" mode.

This mode allows you to set the equalizer, various repeat functions, contrast, illumination time, eco mode (automatic shutoff), recording settings, language and the color of the background.

Push the "Jog Key" to the right ⏭ or left ⏮ to select the desired setting, and confirm by pressing the "Jog Key" again.

Mode: Delete

Switch to the "Del" mode.

This mode allows you to delete music or voice recordings. Use the "Jog Key" to select the title you want to delete by pressing the "Jog Key" to the right ⏭ or left ⏮ . Then press the "Jog Key", followed by pressing the ⏯ button to permanently delete the title.

Mode: System info

Switch to the "About" mode.
Now among other information the entire and free memory are displayed.

TrekStor GmbH & Co. KG · Kastanienallee 8 – 10 · D–64653 Lorsch
Support: E-Mail: support@trekstor.de
www.trekstor.de